

**U-BOAT**  
ITALO FONTANA

 
# EN

**DEAR CUSTOMER,  
WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.  
IN THIS BOOKLET YOU WILL FIND THE INSTRUCTIONS FOR USE, THE  
TECHNICAL DETAILS AND THE WARRANTY BOOKLET.  
WE KINDLY INVITE YOU TO REGISTER YOUR WATCH  
ON OUR OFFICIAL WEB SITE  
IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES  
OWNERS AND GAIN ACCESS TO FURTHER BENEFITS AND PREVIEWS ON  
OUR LATEST NEWS, EVENTS AND OFFERS.**



# EMN

## WATCH FUNCTIONS.

- A** CAP CROWN
- B** **B1** CROWN EXTRACTION BUTTON  
(if fitted)
- C** CROWN
- D** START/STOP CHRONOGRAPH
- E** RESET
- F** HOUR HAND
- F1** DOUBLE TIME HAND
- G** MINUTE HAND
- H** SECOND HAND
- I** CHRONOGRAPH SECOND COUNTER
- L** CHRONOGRAPH MINUTE COUNTER
- M** CHRONOGRAPH HOUR COUNTER
- N** 24 HOUR INDICATOR
- O** DATE
- P** DOUBLE TIME BEZEL
- Q** BEZEL LOCK LEVER

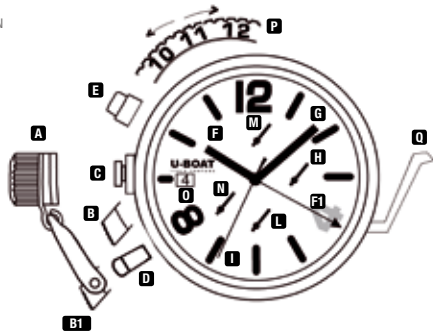

  REPRESENTATIVE IMAGE.  
SOME COMPONENTS MAY BE IN DIFFERENT POSITIONS OR NOT FITTED.

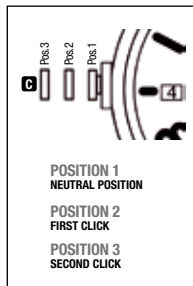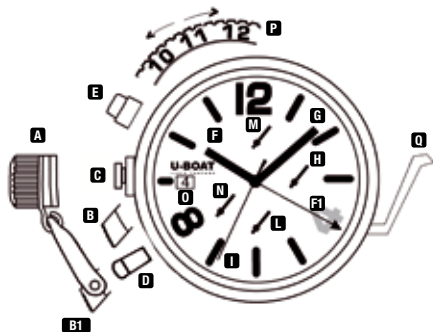

## INSTRUCTIONS FOR USE.

1. Unscrew the cap crown **A** to gain access to the crown **C**.

**POSITION 1** to wind and start the watch by turning the crown **C**.

### NEUTRAL POSITION

**POSITION 2** press button **B** | **B1** (if fitted) (**B1** incorporated in the cap crown holder **A**) to move the crown **C** into position 2 (first click). Turn the crown **C** clockwise to set the date **O**.

### FIRST CLICK

\*For the models which do not have the crown release system, carefully pull the crown right out to the first click.

 
 
**\*CAREFULLY READ THE INSTRUCTIONS ON PAGE 13.**

**POSITION 3** press button **B** | **B1** (if fitted) (**B1** incorporated in the cap crown holder **A**) again to move the crown **C** into position 3 (second click) to set the exact **N** time. Use indicator **O** for correct date change.

### SECOND CLICK

\*For the models which do not have the crown release system, carefully pull the crown right out to the second click.


2. Fully depress the crown **C** to move it back into the neutral position. Carefully screw in the cap crown **A** until firmly in place.

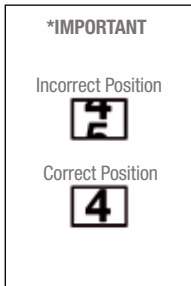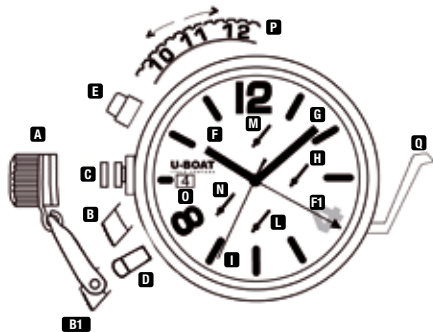

**\* IMPORTANT**

To prevent misalignment or breakage of the date wheel when setting the date, make sure that:

 1. during manual adjustment of the date **O**, hour hand **F** is not pointing between 9pm and 3am (check the 24 hour hand **N**).
2. the day indicated by the date indicator **O** is aligned with the window (see illustration on page 8).
3. take the crown **C** out to the second click, move the hand **F** to 3 pm, depress the crown **C** to the first click and move the date indicator **O** to the desired date and check the alignment as indicated in point 2 above.

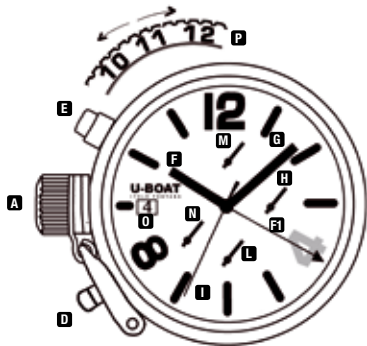


## CHRONOGRAPH OPERATION INSTRUCTIONS

Press button **D** to start the chronograph and the hour/minute totalizer.

Press button **D** again to stop the chronograph and read the elapsed times.

 Press button **E** to reset the counter.

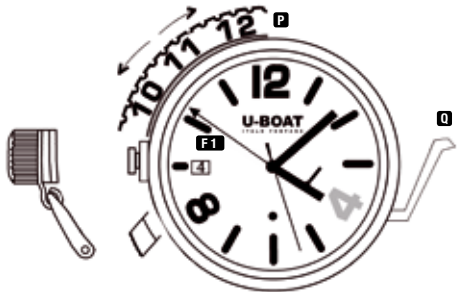

## INSTRUCTIONS FOR DOUBLE TIME SETTING

Release lever **Q** and turn the dual time bezel **P** to the desired hour in correspondence to the hour hand **F1**.

After setting the required time, return lever **Q** to the lock position.

# EN

## **CARE AND MAINTENANCE.**

The precision mechanism in your watch will provide long-lasting performance when properly cared for.

We recommend taking your watch to an Authorised Retailer / Authorised Service Centre every 3-4 years for a check-up and to perform ordinary maintenance on all mechanical parts.

We also advise taking your watch to an Authorised Retailer / Authorised Service Centre to change the strap.

Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields.

Remember to rinse the watch after it comes into contact with seawater.

Automatic watches require manual winding following a long period of inactivity.



# GUARANTEE CERTIFICATE

New Time srl certifies that the warranty on this U-BOAT watch is valid for two years from the date of purchase.

The warranty does not cover defects and damage caused by misuse, or loss or theft.

Misuse also refers to modifications or replacements performed using parts or accessories which are NOT U-BOAT originals and/or by unauthorised personnel. Any work performed by unauthorised third parties voids the warranty certificate.

The warranty certificate is valid only if:

1. The watch was sold by an authorised U-BOAT retailer.
2. The warranty certificate has been carefully and fully completed.

Retailer Stamp

Model \_\_\_\_\_

Ref. n° \_\_\_\_\_

Serial n° \_\_\_\_\_

Date \_\_\_\_\_

U-BOAT HEAD OFFICE

Via per San Gennaro, 13

Gragnano, Capannori - 55012 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

[service@u-boatwatch.com](mailto:service@u-boatwatch.com)

