


How to use an adjustable three-fold type clasp (Type with the tip of the band on the outside)

Refer to the illustrations below to identify your clasp type and follow the applicable instructions to adjust the band length.


● How to identify the clasp type



* Some details may differ depending on the model.


Type I

No material marking on the back of the clasp.




Type II

Material marking on the back of the clasp.




■ Adjustable three-fold clasp Type I


1. Press the push buttons on both sides of the flap to open the clasp.

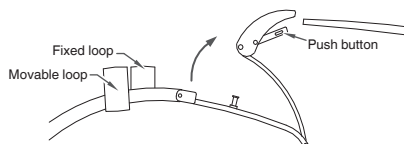

2. Press the push buttons again to unfasten the flap. Then thread the tip of the band through the buckle.

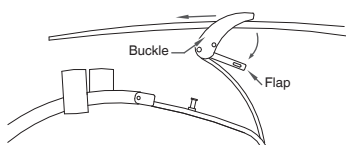


3. Slide the band left or right to adjust it to the desired length. Insert the pin into the appropriate adjustment hole and then close the flap.

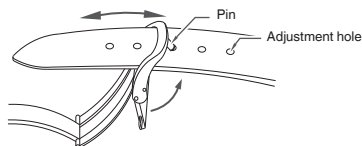


■ Adjustable three-fold clasp Type II


1. Hold the rail securely, and lift the buckle as shown in the illustration.

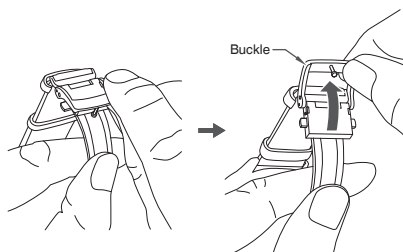

2. Press the push button to open the clasp. Then thread the tip of the band through the buckle.

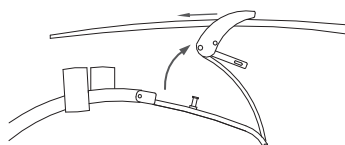

3. Slide the band left or right to adjust it to the desired length. Insert the pin into the appropriate adjustment hole and then close the flap.

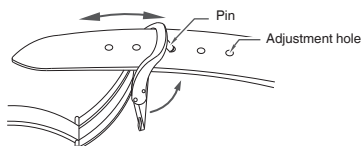

Instruction Manual

The instruction manual is available on the SEIKO WATCH website at the URL below.
<https://www.seikowatches.com/global-en/customerservice/instruction>